

INSTRUCTIONS

Keep these instructions - Gardez ces instructions

Cleaning: Before cleaning your lamp, turn off the switch or power source. Wipe the lamp with a soft, damp fabric.

Nettoyage: Avant de nettoyer votre lampe, fermez ou coupez la source d'énergie. Essayez la lampe avec un linge doux et humide.

Please read carefully the following instructions. It is important to make sure that the lamp is unplugged and turned off, before starting assembly or replacing a bulb.

Instructions

1. Remove all the components from the packaging.
2. Assemble the table clamp and tightly secure to your working surface.
3. Insert the lamp post into the clamp.
4. Adjust the friction knobs so that the lamp can be adjusted freely while still being held in place.
5. Install the bulb carefully in clockwise direction.
6. Insert the plug into a conveniently located electrical socket.

Caution

1. Before changing the bulb, turn off/unplug and allow to cool.
Do not touch the bulb when the lamp is switched on.
2. If the supply cord is damaged, it must be replaced by the manufacturer or a similarly qualified person in order to avoid any danger.

Important safety procedures

This portable lamp has a polarized plug (one blade is wider than the other) as a safety feature to minimize the risk of electrical shock. This plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not use with an extension cord unless the plug can be fully inserted. Do not alter the plug.

Gooseneck desk lamp

Replacement bulb A19, 60W maximum (sold separately)

Veillez lire attentivement les instructions suivantes. Il est important de s'assurer que la lampe est débranchée et éteinte avant d'entamer l'assemblage ou de remplacer une ampoule.

Instructions

1. Retirez toutes les pièces de l'emballage.
2. Assemblez la bride de fixation et fixez-la fermement à votre surface de travail.
3. Insérez la tige de la lampe dans la bride de fixation.
4. Ajustez la molette de friction pour vous permettre d'ajuster la lampe librement pendant qu'elle reste en place.
5. Vissez l'ampoule dans le sens des aiguilles d'une montre.
6. Insérez la fiche dans une prise électrique adéquate.

Attention

1. Éteignez, débranchez la lampe et laissez refroidir l'ampoule avant de la changer.
Ne jamais toucher l'ampoule lorsque la lampe est allumée.
2. Si le cordon électrique est défectueux, il est préférable de le faire remplacer par le fabricant ou une personne qualifiée de façon à éviter tous dangers.


Importantes directives de sécurité

Cette lampe portative est munie d'une fiche polarisée (une borne plus large que l'autre). Ce dispositif de sécurité diminue le risque de chocs électriques puisque la fiche ne s'insère dans la prise que d'un seul côté. Si elle n'entre pas dans la prise, inversez-la. Si elle n'entre toujours pas, communiquez avec un électricien qualifié. N'utilisez jamais une rallonge sauf si la fiche s'insère entièrement. Ne modifiez pas ce dispositif de sécurité.

Lampe de bureau avec bras flexible

Ampoule de remplacement A19, 60W maximum (vendue séparément)

For item / Pour item 1-69061 & 1-69062

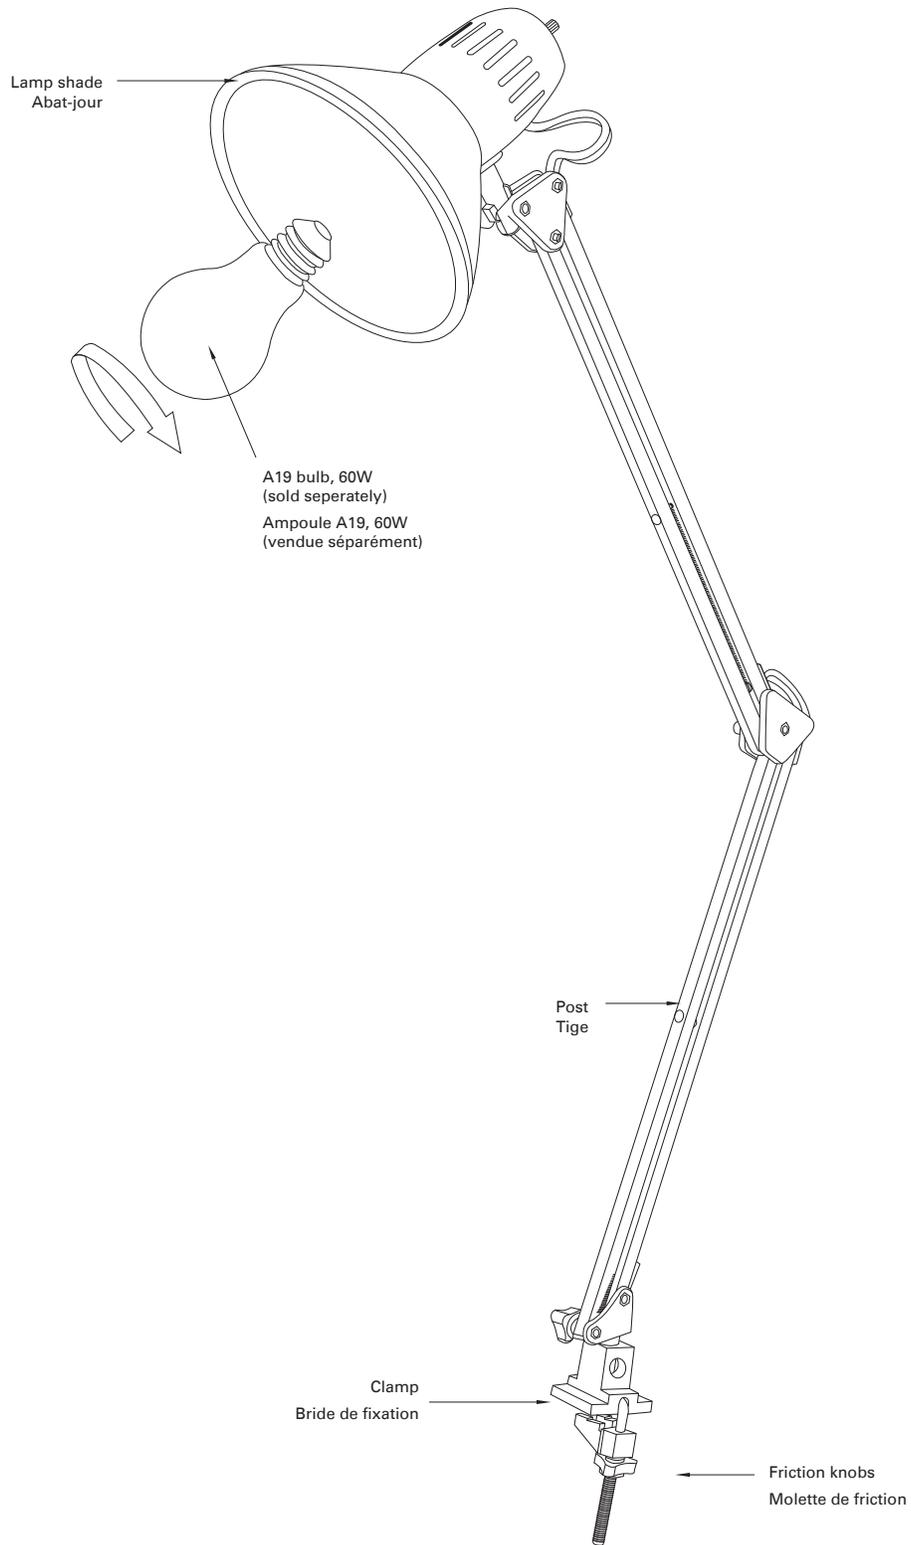

DESIGN AND COLOR MAY VARY DEPENDING
ON THE STYLE PURCHASED.

LA FORME ET LA COULEUR PEUVENT VARIER
SUIVANT LE MODÈLE ACHETÉ.